

ASSEMBLY INSTRUCTIONS FOR

Expiration Date Gun Labels (#4009/4010)



Step 1. Turn the label gun over.



Step 2. Press both side cap locks to release the bottom assembly.



Step 3. Pull bottom assembly open toward the handle.



Step 4. Load the labels dropping them into the gun.

Call Free 1.800.848.1633 • Fax Free 1.800.447.2923
Web: GoHCL.com • Email: hcl@GoHCL.com

ASSEMBLY INSTRUCTIONS FOR

Expiration Date Gun Labels (#4009/4010)



Step 5. Pull the tail out and close the bottom assembly.



Step 6. Press until the assembly clicks.



Step 7. Feed the tape through the feed drive wheel on the side closest to the handle.



Step 8. Be sure to remove the labels on the outside of the gun. Otherwise they will get clogged up when the tape advances through the gun.



Step 9. Click the handle of the gun several times to progress the tape through the gun.



Step 10. Now the label gun is ready to use.

Call Free 1.800.848.1633 • Fax Free 1.800.447.2923
Web: GoHCL.com • Email: hcl@GoHCL.com

ASSEMBLY INSTRUCTIONS FOR

Expiration Date Gun Labels (#4009/4010)

Changing the Ink Roller

1. The ink roller is located behind the door at the nose of the labeler. Access the ink roller by pulling the ink roller door out and down (Figure A).
2. Pinch the two tabs at the ends of the roller, then pull up and out to release the ink roller from its station (Figure B).
3. Dispose of the spent ink roller and insert a new roller.
4. Replace the ink roller by performing the steps above in reverse. Close the front protection plate.
5. Never re-ink an ink roller. The rollers are not designed to absorb ink.

