

# INSTRUCTIONS FOR Stainless Steel Tables on Casters (#19103)

## Parts List:

Top (1)

Legs (4)

Support Bars (3)


Button-Head Screws (20)

Swivel Casters (2)


Locking Casters (2)




**Step 1.** Start with the top marked "A" laying upside down on the box it was delivered in. Note: We suggest working within the delivery box to prevent scratching the top of the table.

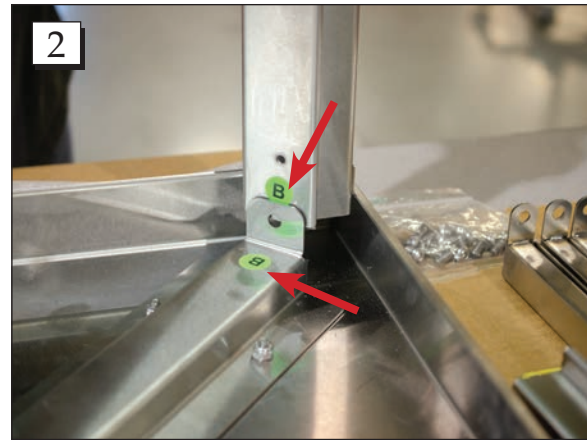

**Step 2.** Starting at the corners marked "B", install the corresponding legs marked "B".

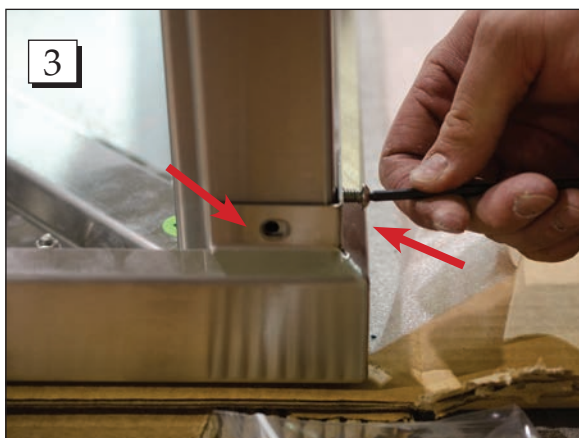


**Step 3.** Place two button head screws on the outside of the leg. Tighten the button head screws with the provided Allen wrench.

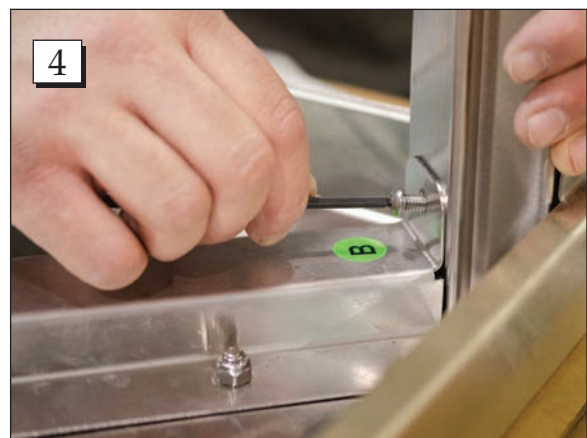


**Step 4.** Place one button head screw on the inside of the leg. Tighten the button head screw with the provided Allen wrench.

Call Free: 1.800.848.1633 • Fax Free: 1.800.447.2923  
Web: GoHCL.com • Email: hcl@GoHCL.com

# INSTRUCTIONS FOR Stainless Steel Tables on Casters (#19103)

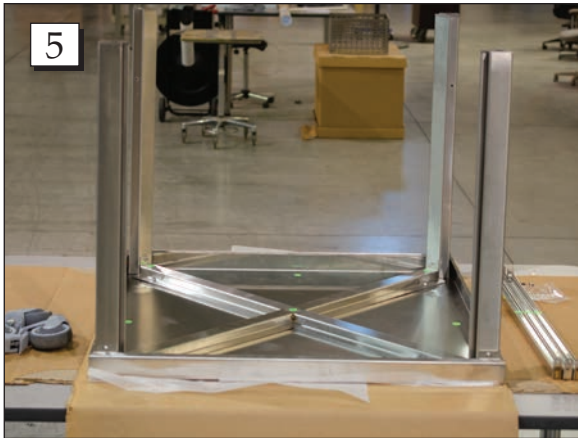

**Step 5.** Repeat steps 2-4 on the remaining legs.

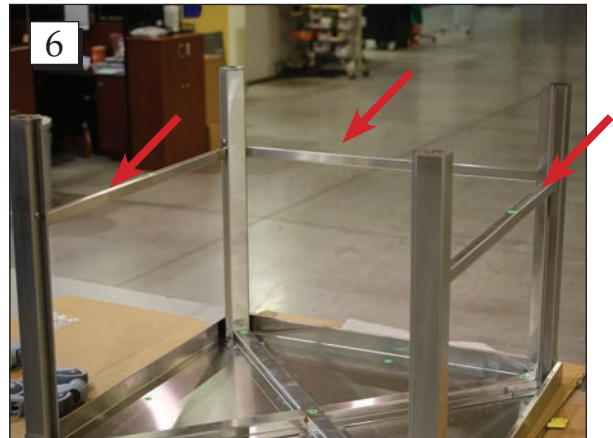

**Step 6.** Place each of the three support bars.



**Step 7.** Secure both ends of each support bar with a button head screw. Tighten the button head screws with the provided Allen wrench.



**Step 8.** Tighten the four casters into place.



**NOTE:** Put the two locking casters on one side.



**Call Free: 1.800.848.1633 • Fax Free: 1.800.447.2923**  
Web: [GoHCL.com](http://GoHCL.com) • Email: [hcl@GoHCL.com](mailto:hcl@GoHCL.com)