


INSTRUCTIONS FOR

Wall Mount Wipe Dispensers (#17888, 17889)

NOTE: Be sure to select the appropriate mounting hardware to ensure safe and reliable use. Mount hardware through a stud, blocking or rigid structure where possible during installation.



Step 1. Place the wall dispenser against the wall and use a level to straighten the dispenser.

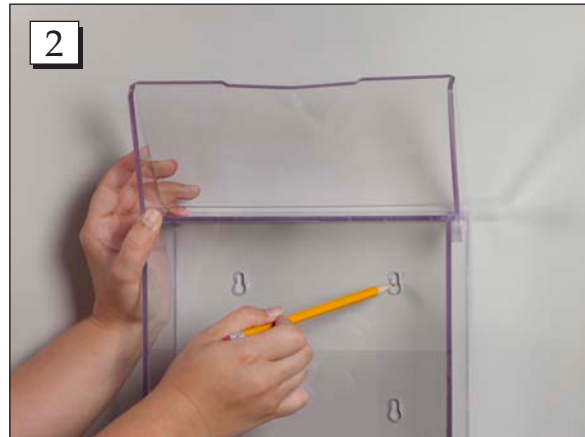

Step 2. Lift the lid and use a pencil to mark the drill holes.



Step 3. Use a screwdriver to screw in 4 screws (not provided).



Step 4. Leave about 1/4" of the screw out from the wall for the dispenser to hang from.


Call Free: 1.800.848.1633 • Fax Free: 1.800.447.2923
Web: GoHCL.com • Email: hcl@GoHCL.com

INSTRUCTIONS FOR

Wall Mount Wipe Dispensers (#17888, 17889)



Step 5. Line up the dispenser to the screws.

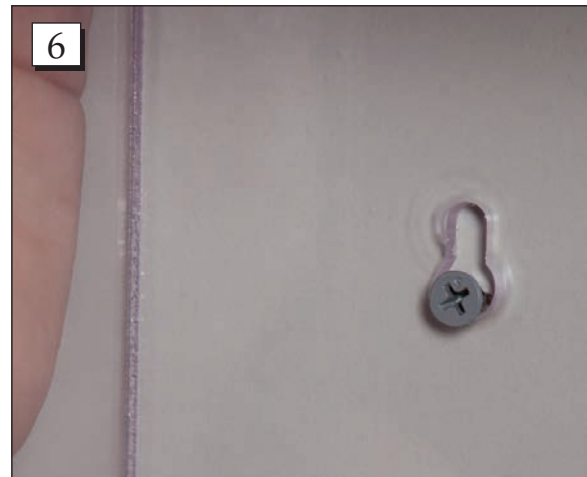

Step 6. Push the dispenser onto the screws through the largest part of the keyholes. Then pull the dispenser downward until the screws slide to the upper part of the keyhole.



Call Free: 1.800.848.1633 • Fax Free: 1.800.447.2923
Web: GoHCL.com • Email: hcl@GoHCL.com