

INSTRUCTIONS FOR Stack & Connect Label Dispenser (#12721)




Step 1. Attach the 4 protective feet to the bottom corners.



Step 2. Insert clear plastic dividers into each grooved slot.



Step 3. Your dispenser will look like this with all dividers in place.

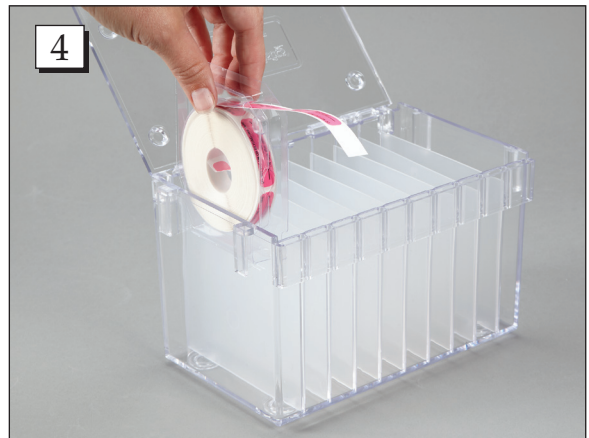

Step 4. Insert blister packed labels into each compartment formed by the dividers.



Step 5. Pull out the first few labels on the roll and slide them down into the label guide on the front of the dispenser. (The first couple labels will need peeled by hand.)



Step 6. Pull the label liner until a label is automatically peeled and dispensed.

Health Care Logistics® is not liable if product is used outside the scope of the instructions.

Call Free: 1.800.848.1633 • Fax Free: 1.800.447.2923
Web: GoHCL.com • Email: hcl@GoHCL.com