


# INSTRUCTIONS FOR APPLYING LABELS AND SEALING ROUND UNIT DOSE BLISTERS USING THE #6461 FOAM SEALING TRAY



1. Prepare the labels that will be applied to the blisters with the pertinent information, such as name of drug, expiration date, barcode, lot number, etc.



2. Remove two 4 x 6 grids of blisters from the blister stack and place in the sealing tray.

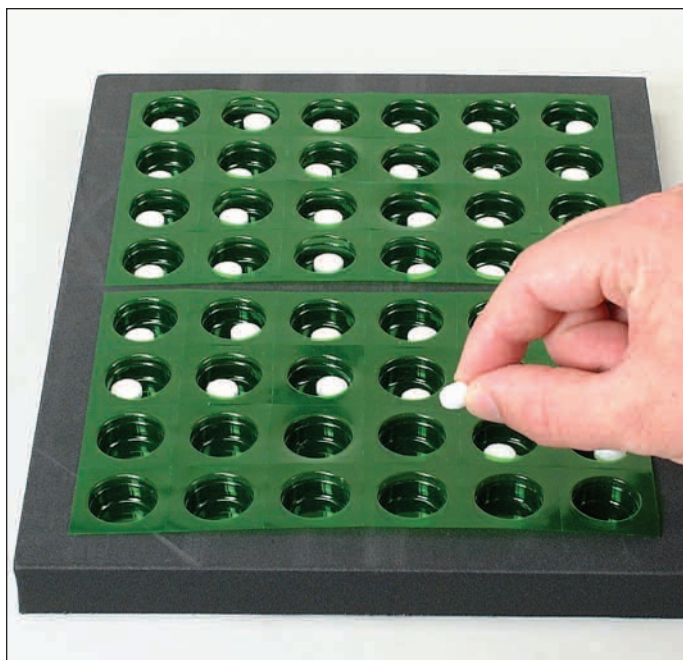

3. Fill each blister cavity.




4. Peel a grid of labels from the 8½ x 11 sheet of laser labels.


# INSTRUCTIONS FOR APPLYING LABELS AND SEALING ROUND UNIT DOSE BLISTERS USING THE #6461 FOAM SEALING TRAY




5. Holding the label grid by the edges on either side, apply the to a grid of blisters in the sealing tray by matching the adhesive on the labels with the edges of the blisters. Repeat steps 4-5 for the second grid in the tray.

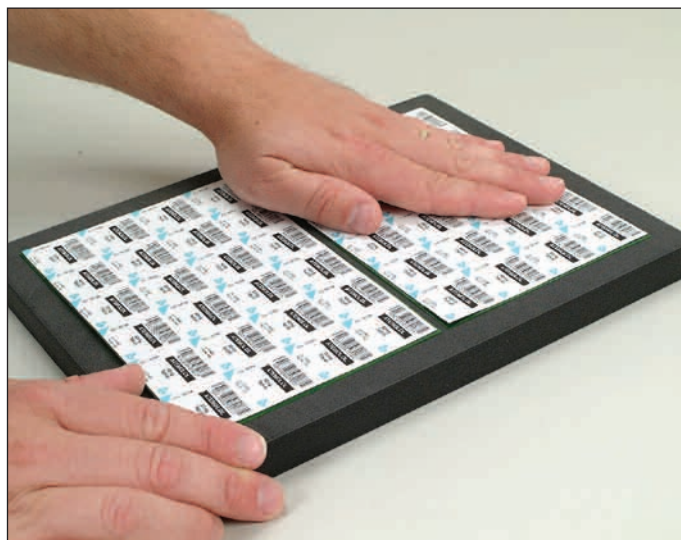

6. Using a circular motion with your hand, press the labels onto the blisters.

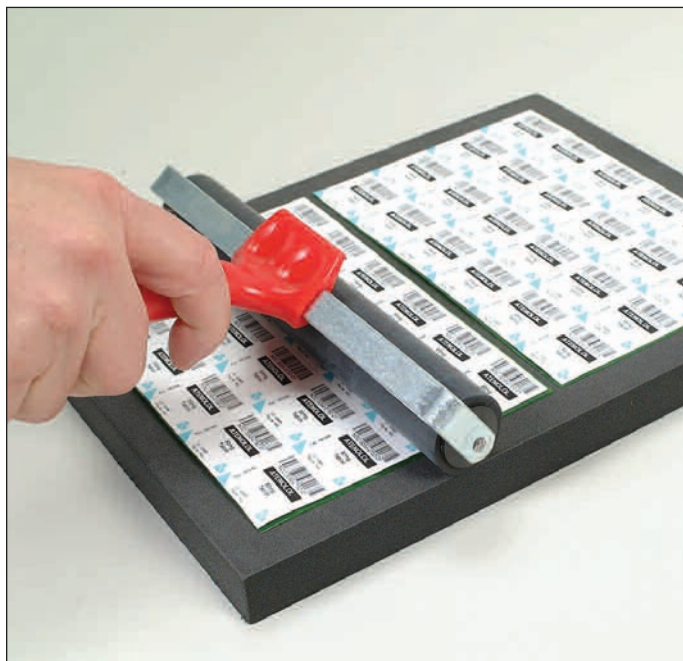

7. Enhance the seal by applying moderate pressure to the sealed blister grids using a sealing roller. Smooth the labels along the entire length of the blister tray.

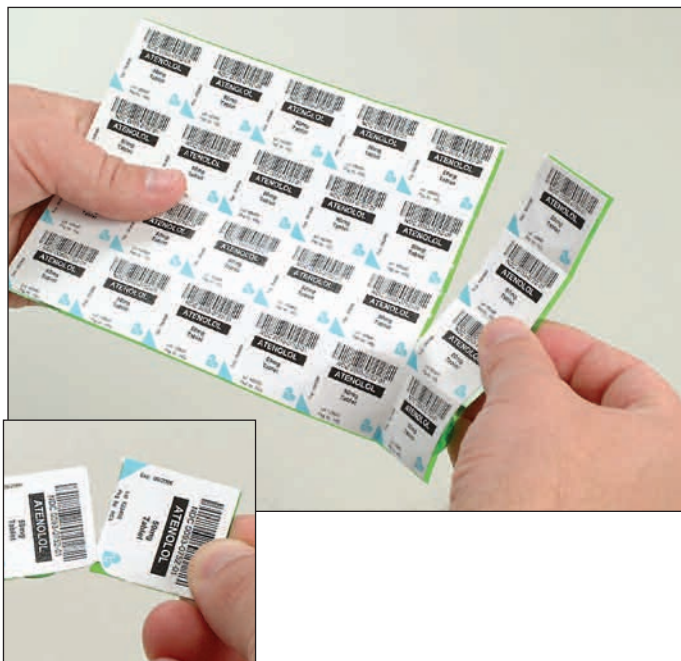

8. Tear apart the strips at the perforations and then the individual blisters. Store or dispense.